nextplay

GG130DP

DIGITAL CAMERA

OPERATING INSTRUCTIONS

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Contents

Package Contents ---------- 3

Camera Description ---------- 4

LCD Monitor Icons ---------- 4

Getting Started ---------- 5

- Install the Batteries ---------- 5
- Attach the Hand Strap ---------- 5
- Insert an SD Card ---------- 5

Taking Pictures ---------- 5

- Using the Self-timer ---------- 5
- Setting the Flash ---------- 6
- Setting Image Resolution and Quality ---------- 6

Playback Mode ---------- 7

- Viewing Images ---------- 7
- Deleting Images/Movies ---------- 7

Movie Mode ---------- 8

USB Mode ---------- 8

Software Installation ---------- 8

Specifications ---------- 9

Package Contents

- Digital Camera
- USB Cable
- CD-ROM software and PC Cam driver
- User Manual
- Camera Strap

Camera Description

Name of Parts

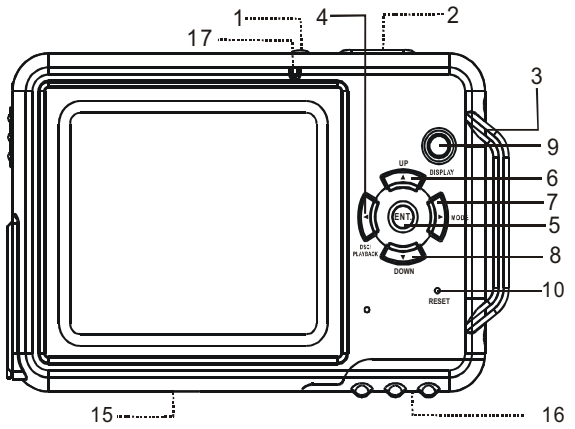

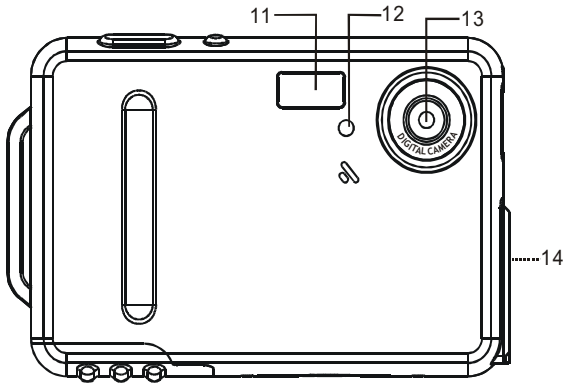

1.Power: Turn on the power (click and sustain 1sec)
Turn off the power (click and sustain3sec.)

2. Shutter: Take a photo

3. Strap grip

4. DSC/playback: DSC Preview and Playback function

5. ENT: Strobe selection at Preview mode
Confirm at Menu mode
Delete current picture at Playback mode

6. Up: Moving Backward

7.Mode: Select function (Menu mode) /Off power push 3 sec. When playback mode, format memory date

8. Down: Moving Forward

9. Display: LCD display On/Off

10. Reset: Insert pin to reset internal memory and settings. All settings and internal memory will be cleared.

11. Flash

12. Self-timer indicator

13. Lens

14. USB connector (under jack cover)

15. SD card Slot

16. Battery door

17. Flash ready indicator

LCD Monitor Icons

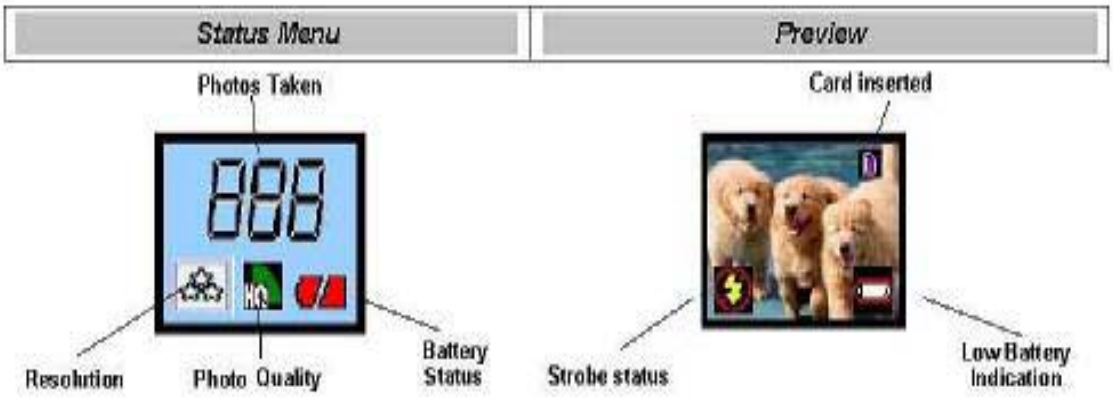

Getting Started

Install the Batteries

1. Turn camera off (#1 on previous page)
2. Slide battery door open (#16)
3. Insert 2 AA batteries, noting correct polarity (+ and -)
4. Close battery door

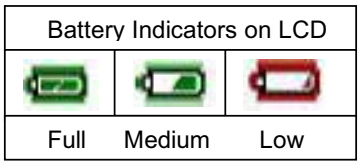

Note: If dead battery replacement takes longer than four minutes you run the risk of losing saved photos. Not applicable to photos saved on an external SD card.

Attach the Hand Strap

To help prevent accidental dropping of the camera always use the hand strap.

1. Thread the small loop of the hand strap through the strap grip on the camera (#3).
2. Pull the large loop through the small loop until the strap is firmly secured.

Insert and eject an SD Memory Card (optional accessory)

The camera comes with 8MB of internal memory. To expand the memory capacity, you can use an SD memory card (not included).

1. Turn camera off (#1).
2. Insert an SD card into the SD slot on the bottom of the camera (#15). The front side of the memory card should face towards the front of the camera.

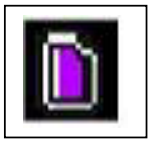

To remove the SD Card, make the camera is off and lightly press on the edge of the memory card and it will eject.

Taking Pictures

1. Turn the camera on by pressing the power button (#1).
2. Compose your shot by viewing the 1.4” LCD monitor.
3. Press the shutter button.

Using the Self-timer

When used, the camera will take a picture automatically after 10 seconds.

1. Press the Mode button (#7) until you reach self-timer mode.
2. Compose the shot and press the shutter button.

Setting the Flash

The camera has three flash modes:

- Automatic – Flashes automatically based on lighting conditions.
- Forced – Flashes for all pictures.
- Off – The flash will not fire.
- Press Enter to switch flash mode.

Using the 3 photo function

Allows you to take 3 continuous photos.

1. Press the Mode button until you reach the 3 photo icon
2. Press the shutter button
3. 3 photo function can only be used when the flash mode is turned off

Setting Image Resolution and Quality

The resolution and quality settings determine the image size and amount of detail for your images. These settings also affect the number of images you can store in memory or on a memory card.

Set Image Resolution

1. Press mode button to status display
2. Press Enter/Set button and UP or DOWN button until your desired Resolution appears on LCD monitor.
3. Press Enter/Set to confirm

Set Image Quality

1. Press mode button to status display
2. Press Enter/Set button and UP or DOWN button until your desired Image Quality appears on LCD monitor.
3. Press Enter/Set to confirm

The camera comes with three resolution settings (1.3M, VGA, CIF) and two quality settings (HQ, SQ). Higher resolution and quality settings are recommended for printed output and situations requiring the finest detail.

Resolution Setting	Quality Setting	Max pictures in storage (8MB)	Detail Level
1.3M	HQ	34	Highest detail
VGA		83	Medium detail
CIF		206	Low detail
1.3M	SQ	49	High detail
VGA		117	Low detail
CIF		295	Lowest detail

Playback Mode

Viewing Images

Play back photographed still images one image at a time. If there is no image stored in the memory, playback mode will not function.

1. Press the DSC/Playback button. The last recorded image appears on the monitor.
2. Select the image that you want to view by using the UP and DOWN buttons.

Deleting Images

To delete one image or video clip:

1. Press the DSC/Playback button
2. Press the UP or DOWN button to the unwanted image
3. Press the Enter/Set button to “Delete Now” page
4. Select OK by pressing the UP or DOWN button
5. Press Enter/Set to erase image or clip

To delete all images at once:

1. Press the DSC/Playback button
2. Press the Mode button to the Format page
3. Press UP or DOWN to enable format function
4. Press Enter/Set button to erase all images/clips.

Movie Mode

Recording

Record video clips at a resolution of 320x240 pixels and store up to 5 fifteen-second clips.

1. Press mode button until you reach Movie Mode.
2. Start recording by pressing the shutter button.
3. Stop recording by pressing the shutter button again.

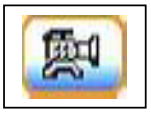

Viewing

Video clips appear as a still image with an AVI icon place over the corner. To view the recorded video clips please use the included software.

USB Mode

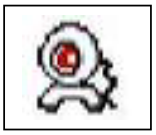

- The removable disk function allows you to upload or download files or photos to your camera.
- The PC webcam function allows your camera to act as a webcam when connected via USB.
- The PC Driver on the cd-rom must be installed. Follow instructions in the included booklet.
- Set your camera to webcam mode.
  1. Turn camera on
  2. Press mode twice
  3. Press enter
  4. Press mode twice
  5. Press down once or until webcam icon appears
  6. Insert USB cable into computer and camera
  7. Go to “EZCam” and click on the “PCCam” icon
  8. Go to Options and enable Preview function
  9. Use your favorite video chat software

  Note: Due to unlimited third-party computer and webcam software configurations the webcam function is not guaranteed to operate on all systems. Software only works on a Windows@ based system OS: Win98SE/2000/ME/XP

Software Installation

Basic Computer Requirements:

- CPU: Pentium III 800MHz or higher
- Memory: 128MB or higher
- OS: Win98SE/2000/ME/XP
- Space: At least 80MB free
- CD-ROM
- One USB 1.1 port

IMPORTANT: INSTALL THE SOFTWARE AND DRIVER BEFORE CONNECTING THE CAMERA TO YOUR COMPUTER.

CD-ROM Bundle

- Photo2Album – Insert the CD-ROM into your computer's CD player. The Installation Screen will automatically launch. Follow the on-screen instructions to complete the installation. To learn more or upgrade the bundle, please visit www.photo2album.com
- PC Cam Driver – Double click the "My Computer" icon then the CD-ROM icon. Find and open the "PC Cam Driver" folder. Double click the "EZCam_public_WHOL_050112V1.3.0.2.exe file. Follow the on-screen instructions to complete the installation. The webcam function on your camera will not operate if this driver is not installed.

Specifications

Item	Description
Sensor	640 X 480 megapixel CMOS
Resolution	CIF, VGA, 1.3M
	(interpolated)
Quality	Normal, High
LCD	1.4" CSTN LCD
Self-timer	10 second delay
Capture modes	Still or video
Memory type(s)	Internal: 8MB
	External: SD memory card
Effective Flash Range	1~1.3 Meters
Lens	Fixed Focus
Focus Range	1 Meter to infinity
White Balance	Auto
Interface	USB
Power	2 AA Batteries (Alkaline)
Dimensions	98 X 63 X 28mm
Weight	80g (without batteries)

LIMITED WARRANTY

nextplayTM warrants this product to be free from defects in material and workmanship within the following warranty period, starting from the date of sale to the original consumer purchase.

If this product proves defective within the **NINETY (90) DAY** warranty period the retailer will exchange the defective product. Said product must be returned, with your original sales receipt, to the retailer of purchase. The retailer of purchase will replace the product under their return policy.

This warranty does not apply to any nextplayTM product which is used for commercial, rental, or industrial purposes, is damaged by accident, misuse, abuse, improper line voltage, water, lightning, or any acts of God. This warranty is void if product is altered, modified, or if any parts or service covered by this warranty are furnished by anyone other than nextplayTM or one of its independent Authorized Warranty Stations. This warranty does not cover cartons, carrying case, batteries, cosmetic parts, broken or marred cabinets, magnetic tapes, compact disc, or any other accessories used in connection with the product or consequential damages due to a defect in the product.

ALL IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THIS WARRANTY. THIS IS THE COMPLETE WARRANTY BY nextplayTM AND NO OTHER EXPRESSED WARRANTY IS VALID AGAINST nextplayTM. SOME STATES (PROVINCES) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR AN EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may have other rights which may vary from state to state (province to province).

FOR HELP AND INFORMATION REGARDING YOUR NEXTPLAY PRODUCTS,
PLEASE VISIT **www.nextplayworld.com**

- KEEP YOUR SALES SLIP WITH THIS WARRANTY STATEMENT -

AvailaSoft®

Photo2Album®

Download samples of Email-Sized Photo Albums: http://www.availasoft.com/se

Cash Coupon US $90

Photo2Album® Professional

Original: ~~US $119.95~~

Now: US $29.95

Cash Coupon Code: $268588962

Redemption Link: http://www.availasoft.com/coupon/268

Photo2Album Professional

www.photo2album.com

Enquiry: help@availasoft.com

Input Cash Coupon Code under the Redemption Link to purchase Photo2Album Professional at US $29.95.

Terms & Conditions:
1. This coupon cannot be redeemed for cash and cannot be used in conjunction with other offers or promotions.
2. AvailaSoft Corporation reserves the right of all final interpretation.

Cash Coupon US $50

Photo2Album® Standard

Original: ~~US $69.95~~

Now: US $19.95

Cash Coupon Code: $268697875

Redemption Link: http://www.availasoft.com/coupon/268

Photo2Album Standard

www.photo2album.com

Enquiry: help@availasoft.com

Input Cash Coupon Code under the Redemption Link to purchase Photo2Album Standard at US $19.95.

Terms & Conditions:
1. This coupon cannot be redeemed for cash and cannot be used in conjunction with other offers or promotions.
2. AvailaSoft Corporation reserves the right of all final interpretation.

AvailaSoft®

Photo2Album®

The World's 1st Email-Sized Photo Album

100 Photos - 1MB

Share, Edit, Organize Digital Photos

Email-Sized Album

100 Photos - 1MB

250 Photos - 2MB

3D Digital Photo Album

All-In-One

Easy To Use!

Email-Sized Album, Album CD, Photo VCD

• Email-Sized Album and Album CD can run on computer directly without any software!

Cash Coupon - US $90/US $50

All Provide:

I). One Second To Create Photo Album

- Drag and drop photos to create organized and auto-indexed album (ONE SECOND).

II). Album View with 3D Page-Flipping

- View photos on Album View with 3D Page-Flipping Effect (+ effect + music).

III). Photo Editing

- Adjust Contrast, Brightness, RGB, Gamma, Hue, Saturation and Solarization.
- Make Gray Scale, Negative, Mix, Repair, Emboss and Noise Effects.
- Remove red eye problem and wrinkles.
- Add text of any color and font.
- Copy background pattern and design your own cover.
- Convert image size to smaller or larger one.
- And many more . . .

Photo2Album - Feature Comparison	Standard	Professional
Email-Sized Photo Album Design Email-Sized Photo Album (+ effect + music) that runs directly without any software.	✓	✓
Autorun Photo Album CD Design Photo Album CD (+ effect + music) that runs directly without any software.	✓	✓
Photo VCD Design Photo VCD using photos or album pages.	✓	✓
Photo Album File Create Photo Album File for making Multiple Photo Albums on a single CD.	✓	✓
Magic Screen Saver Design Screen Saver with selected effects.	✓	✓
Wonderful Wallpaper Design Wallpaper with selected effects.	✓	✓
Album Backup File Back up important albums as zip files.	✓	✓
Photo2Album Backup Folder Create Photo2Album Backup Folder for backing up the whole Photo2Album.	✓	✓
Photo Protector Create Password Protected Folder and move confidential photos to it for auto-encryption.		✓